

Cafelier

U S E R M A N U A L



EN: Introduction

Congratulations on your purchase and welcome to the Cafelier family! To fully benefit from the support that Cafelier offers, register your product at www.cafelier.eu/faq. Please read this user manual, as it contains information about the features of this product as well as some tips to make cleaning easier and faster.

Important safety information

Preset the appliances in the accessories read these carefully save important information in them for later use. You can easily differentiate the supplied accessories depending on the product

Danger



Keep the supply unit dry.

Warning

1. To charge the battery, only use the official provided supply unit provided with the appliance.
2. This appliance can be used by children aged from 12 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. Always unplug Cafelier before you clean it under the tap.

CLEANING UNDER THE TAP IS ALLOWED ONLY FOR CLEANING THE BRUSH PART OF CAFELIER.

4. Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.

5. Do not open the appliance.

Caution: Never submerge the cleaning system or the charging plug in water.

6. Always use cold water to rinse the product.

7. Only use this appliance for its intended purpose as shown in the user manual.

8. Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

9. Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.

Electromagnetic fields (EMF)

1. This Cafelier appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.



2. This product is water resistant. It is suitable for cleaning under the tap. For safety reasons, the product can therefore only be used without electrical cord. For more details on cleaning turn over to page (13).

3. The supply unit is suitable for mains voltages ranging from 100 to 240 volts.

4. The supply unit transforms 100-240 volts to a safe low voltage of less than 5V.

I. Cafelier C2: general




Legend:

- 1 Brush Cafelier
- 2 Standard lever for attachment to coffee machine
- 3 Water outflow
- 4 Power button
- 5 Charging connector
- 6 LED indicator

II. Changing the Cafelier brush


Removing and attaching the Cafelier brush

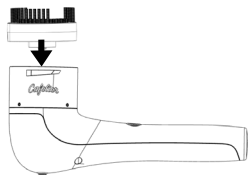

1. Make sure the product is turned off and unplugged.
2. Pull the brush by the bristles straight off the Cafelier. Note: Do not twist the brush head while you pull it out of the product
3. Insert the new brush into the lever. Then press down the attachment to attach it to the product.
4. The Cafelier brush is now safely replaced.


III. On/off button

1. When you press the on/off button for the very first time the LED indicator light lights up. Cafelier C1 contains enough energy for cleaning.
2. One press of the power button starts the cleaning cycle. The LED indicator turns on at the start of the cycle and lasts 10 seconds (5 seconds spinning anticlockwise and 5 seconds spinning clockwise), when finished, it automatically turns off.

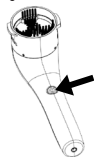

3. Pressing the power button twice will stop the cycle if you have mistakenly turned the appliance on.


IV. LED light

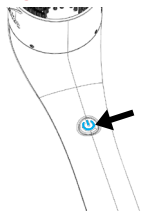

1. A blue light indicates working mode.
2. A green light indicates the battery is full.
3. A red light flashing indicates low battery.
4. A red non-flashing light indicates charging.
5. Malfunction - fast flashing red light

If a red fast-flashing light turns on, detach the product from your espresso machine and press the on/off button twice.

V. Battery charge

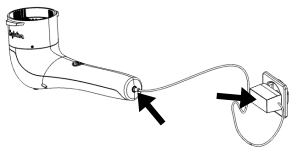

Charging with the supply unit


1. Make sure Cafelier C1 is switched off.
2. Put the small plug in the product and put the supply unit in the wall socket. The LED light indicates (red non-flashing) that the product is charging.
3. After charging, remove the supply unit from the wall socket and pull the small plug out of the Cafelier.

Before using Cafelier

Always check Cafelier and all accessories before use. Do not use Cafelier or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

VI. Cleaning and maintenance

Regular cleaning guarantees better cleaning results. Never clean, remove or replace the brush head while the product is switched on. Do not apply pressure to the brush. Do not use abrasive cleaning agents, scourers or aggressive liquids such as gasoline or acetone to clean the product.

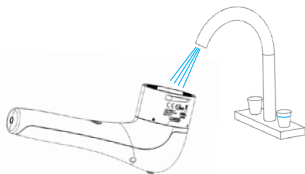

Cleaning the Cafelier brush

Clean the product after every use for optimal performance. Always check if the water is not too hot, to prevent burning your hands. Never dry the product with a towel or tissue, as this may damage it. While rinsing the product, water may drip from the base of the product. This is a normal occurrence.

1. Make sure that the product is turned off and unplugged.
2. Simply rinse the brush under tap water (NEVER submerge the whole product).
3. Let the water drain completely.
4. Store it on a level surface to prevent water leakage to electronics.

VII. Replacement reminder

For maximum cleaning performance and hygienic reasons, we advise you to replace the brush head after 200 cleaning cycles or every two months. Replace a damaged brush immediately. Always replace the brush head with original Cafelier parts. (see 'Cafelier brush' at www.cafelier.eu). To change the brush, follow the steps on previous page.



ATTENTION: The brushes are designed to bend and adjust with the first use. This process will give you better cleaning efficiency.

VIII. Storage

The optimum storage after using Cafelier would be in a place that is not exposed to heat or other hazardous weather conditions in a level place to ensure a safe drainage of the excessive water.

XI. Recycling



This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU).



This symbol means that this product contains a built-in rechargeable battery which shall not be disposed of with normal household waste (2006/66/EC).

Please take your product to an official collection point or a CafelieR service center to have a professional remove the rechargeable battery.

Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

X. Warranty and support

If you need information or support, please visit www.cafelieR.eu/support or read the international warranty leaflet www.cafelieR.eu/faq.

XI. Warranty restrictions

The CafelieR brushes are not covered by the terms of the international warranty because they are subject to wear.


User instructions for a blind basket

- 1 Remove the brush
- 2 Insert the blind basket
- 3 Attach the handle to the coffee machine
- 4 Press the "back-flush" cleaning button on coffee machine
- 5 A cleaning detergent may be used




ATTENTION: Never touch the steel part, because it may be hot!
After use rinse under cold water.

1

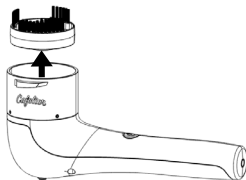

2

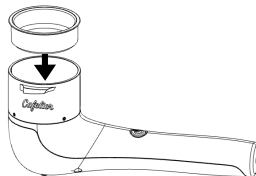

Cafélier d.o.o.

Slovenia

info@cafelier.eu
support@cafelier.eu
www.cafelier.eu

 [cafelier_official](#)